

## SERIE 600 INSTRUCTIONS

### TOGGLES AND BUTTONS ON REEL

ON/OFF TOGGLE: turn on the motor and display. If this is not turned on the electronic counter does not operate, therefore we suggest you always keep it on.

MOMENTARY TOGGLE: takes reel to max speed.

 
### DISPLAY CONTROLS



The control board features 4 buttons to program the functions:

### PROGRAMMING

By Holding Button A pressed you access the menu.



By pushing the other buttons you switch between functions:

Button A: Meters or Yards

Button S: Type of line

Button A/J: amount of line on the spool (loaded or to be loaded)

Button M: Save settings and exit.

Once you save and exit (Button M) a menu comes up and you can do the following:



### If the reel has no line on it Automatic Line Loading



With the button A/J in the previous menu set the % of line to load. Press A once to access the automatic line loading function and press A a second time to engage the reel. You can interrupt the line loading and restart this function any time by pressing button A. Upon completion of this function, the reel automatically is ready to operate normally.

### The reel has some line on it

By pressing the button A/J on the previous menu set the % of line on the spool. Press M and exit.

### NORMAL OPERATION

If you freespool the line the reel will count the amount of line out. When ready to retrieve you can operate as follows:

#### 1) Button A - Automatic

If you turn the reel on, it will stop automatically if i am in the autostop mode or it will engage the Jigging function if in the jigging mode.



When retrieving the line, the display will show the yards, the revolutions of the spool and the average speed of the last 20 seconds retrieval.

#### 2) Button S – Modes.

### Autostop Setting



In Autostop you have 2 setting options:

**NORM**: By pushing Button A the reel will retrieve automatically 95% of the line out and then it will stop automatically. During the retrieval of the line you can stop the reel by pushing Button A. It

is a toggle, therefore if you push it again, 95% of the line will be reeled in and the motor will stop automatically.

**SAFE**: Same as above **NORM** with % reduced from 95% to 90%. This is a better setting if you do not use a levelwind.

### Jigging Setting



By repeatedly pushing the Button S, you can select different Jigging functions. Button A will begin the retrieval function. The Jigging feature does not work in depths less than 24 meters (26 yards).

#### 3) Button J/A

Alternates between the Jigging and Autostop functions.

#### 4) Button M – Manuale

Manual setting. Push the Button M and the reel turns on, push it a second time and the reels motor turns off. This is meant to be used to retrieve the last few yards.

### To reset the counter:

Press Button S and J/A at the same time or turn off and on the reel with the toggle

*Please Note: the digital line counter operation is based on the number of revolutions of the spool and mathematical formulas in order to offer the highest accuracy of the amount of line out. Since it is an approximation there might be a slight error margin.*